

Safety Instructions – Garden Swing Cushion

IMPORTANT SAFETY INFORMATION

1. Product purpose

The cushion is intended for use on swings, benches or other types of garden furniture as an element that increases seating and backrest comfort.

The product can be used in the garden, on a terrace, balcony and in other outdoor spaces.

The cushion is not a toy and should not be used by children for play.

The product is intended only for use in accordance with its function – as a seat and backrest cushion for a garden swing or other type of furniture.

2. Technical parameters and material

- Product: garden swing cushion.
 - Cover: waterproof fabric.
 - The fabric has anti-UV properties, helping to reduce colour fading and support the product's visual durability for several seasons.
 - Filling: soft filling that increases seating and resting comfort.
 - The product is equipped with ties / fastening straps that help secure the cushion to the swing.
 - The product is made of safe and non-toxic materials.
 - The product does not contain SVHC substances in concentrations above 0.1%.
-

3. Safe use instructions

- Before use, make sure that the cushion is properly positioned on the swing.
 - The cushion should be attached to the furniture using ties / straps, if the product is equipped with them.
 - Use only on stable, properly assembled and undamaged swings or benches.
 - Do not use the cushion as a mattress, toy, protective pad or impact-absorbing element.
 - Do not stand on the cushion or use it as a platform.
 - Do not use the product if the material is torn, seams or ties are damaged, or the filling is coming out.
 - During heavy rain, storms, hail, strong wind or frost, it is recommended to store the cushion in a dry place.
 - Despite its waterproof properties, the product should not be left for long periods in standing water or constant moisture.
 - Before use, check that the cushion does not move on the swing seat.
-

4. Cleaning and maintenance

- Clean by hand with a soft, damp cloth.
- In case of dirt, use lukewarm water and a mild detergent.
- Do not use aggressive chemicals, bleach or solvents.
- Do not machine wash unless otherwise stated by the manufacturer on the product label.

- Do not tumble dry.
 - Do not iron.
 - Dry thoroughly before storage to prevent mould and unpleasant odours.
-

5. Warnings

- ⚠ The product is not a toy – keep away from children without supervision.
 - ⚠ Do not use near open flames or sources of high temperature.
 - ⚠ Do not use the product if the material, seams, ties or filling are damaged.
 - ⚠ A wet cushion may increase the risk of slipping – before use, make sure the product is stable and properly attached.
 - ⚠ Do not leave the product on the swing unsecured in strong wind conditions.
 - ⚠ The cushion does not increase the permissible load capacity of the swing – always follow the limits provided by the swing manufacturer.
-

6. Packaging information

- The product is packed in plastic packaging to protect it during transport.
 - ⚠ The plastic film is not a toy – there is a risk of suffocation.
 - Keep the packaging away from infants and children.
 - After unpacking, dispose of the plastic film immediately or send it for recycling.
-

7. Disposal

- The product and its packaging should be disposed of through selective collection of textile and plastic waste.
 - Do not dispose of with household waste.
 - Dispose of worn or damaged products in accordance with local waste management regulations.
-

8. Safety and compliance with regulations

The product complies with the requirements of Regulation (EU) 2023/988 (GPSR) on general product safety.

The product is safe to use in accordance with its intended purpose and made of materials intended for contact with the user.

The product does not contain harmful substances in concentrations above the permitted limits.

Manufacturer / Distributor:

TEXCORP Sp. z o.o.

Głogowska 31/33

60-702 Poznań, Poland

E-mail: office@texcorp.pl
Phone: +48 728 976 693