

SAFETY INSTRUCTIONS

compliant with GPSR

Product: Set of 2 SHIRLEY garden chairs with cushions

Manufacturer: Texcorp Sp. z o.o.

Address: ul. Glogowska 31/33, 60-702 Poznan, Poland

Contact e-mail: office@texcorp.pl

Contact phone: +48 728 976 693

1. Product description

The set of 2 SHIRLEY garden chairs with cushions is intended for outdoor and household use, especially in the garden, on a terrace, balcony, patio or in a gazebo. The product consists of two garden chairs with a high backrest, armrests and matching cushions that improve seating comfort.

The chairs have a steel frame and a seat made of plastic - polypropylene with a wicker-like texture. The cushions are intended for seasonal use, are water-resistant, UV-resistant and easy to clean.

The product is intended for sitting only. Do not use it as a ladder, platform, toy or structural element.

2. Technical and usage parameters

- Set contents: 2 garden chairs with cushions
- Maximum load per chair: 120 kg
- Seat material: plastic, polypropylene with a wicker-like texture
- Frame material: steel
- Cushions included: yes, 2 pieces
- Armrests: yes
- High backrest: yes
- Stackable: yes
- Use: garden, terrace, balcony, patio, gazebo
- Assembly: self-assembly, instructions included
- Additional tools: not required
- Total set weight: approx. 10.6 kg
- Carton dimensions: 71 x 10 x 75 cm

3. Instructions for use

- Before first use, assemble the chairs according to the enclosed assembly instructions.
- Connect all parts securely and tighten the screws only after the structure has been correctly aligned.
- Place the chairs on an even, stable and firm surface.
- Before each use, check that the chair is stable and has no damaged parts.
- Do not exceed the maximum load of 120 kg per chair.
- Place the cushions on the seat in a stable way so that they do not slide during use.
- After the season or during longer periods of non-use, store the cushions in a dry place.
- The chairs may be stacked only carefully and on a stable surface.

4. Precautions

- This product is not a toy. Do not allow children to climb, jump or rock on the chairs.

- Children should use the product only under adult supervision.
- Do not sit on the armrests, backrest or edges of the chair.
- Do not stand on the chair or use it as a step.
- Do not exceed the maximum load of 120 kg per chair.
- Before use, make sure that all assembly parts are properly tightened.
- Do not use the product if the frame, seat, backrest, armrests or assembly parts are cracked, deformed or damaged.
- Keep the product away from open flames, grills, fire pits, garden fireplaces and other sources of high temperature.
- Protect the cushions from prolonged exposure to heavy rain, standing water and moisture.
- Dry wet cushions before storage to reduce the risk of mould and unpleasant odours.
- Be careful when stacking the chairs to avoid the stack tipping over or fingers being trapped.
- Do not drag the chair over delicate surfaces, as this may cause scratches.

5. Assembly

The chairs are intended for self-assembly. Assembly must be carried out according to the instructions included with the set.

It is recommended to first loosely connect all parts and only then, after correctly positioning the structure, tighten the screws fully. Incorrect assembly may affect product stability and user safety.

After assembly, check that all connections are stable and that the chair stands evenly on the floor.

6. Cleaning and maintenance

- Clean the chairs and cushions with a soft, damp cloth.
- Do not use aggressive detergents, solvents, bleach or sharp cleaning tools.
- In most cases, dirt on the cushions can be removed with a damp cloth.
- After cleaning, allow the product to dry completely.
- Store cushions in a dry and ventilated place, especially outside the season.
- Regularly check the condition of screws and assembly connections. Tighten them if necessary.
- For longer storage, protect the product from dirt, moisture and mechanical damage.

7. Warnings

- WARNING! The product is intended for sitting only. Do not use it as a ladder, step or toy.
- WARNING! Do not exceed the maximum load of 120 kg per chair.
- WARNING! Do not use the product if it is damaged, unstable or incomplete.
- WARNING! Keep the product away from fire and sources of high temperature.
- WARNING! Be careful during assembly and stacking - there is a risk of fingers being trapped.

8. Packaging warning

WARNING! Plastic packaging may pose a suffocation hazard.

Do not allow children or animals to play with plastic film, bags or packaging elements. After unpacking, keep the packaging out of reach of children and animals or dispose of it immediately in accordance with local regulations.

9. Disposal

Dispose of the product and its packaging in accordance with local waste regulations. Elements made of plastic, metal, cardboard or plastic film should be sorted according to the rules applicable in the local municipality.

Do not dispose of the product or its parts in the natural environment.

10. Safety and GPSR compliance

The product is intended for normal use in accordance with its function. To maintain safety, follow these instructions, assembly recommendations and warnings.

If any product damage or hazard related to its use is noticed, stop using the product and contact the manufacturer.